1.20 ELECTRIC DIAGRAM 2005

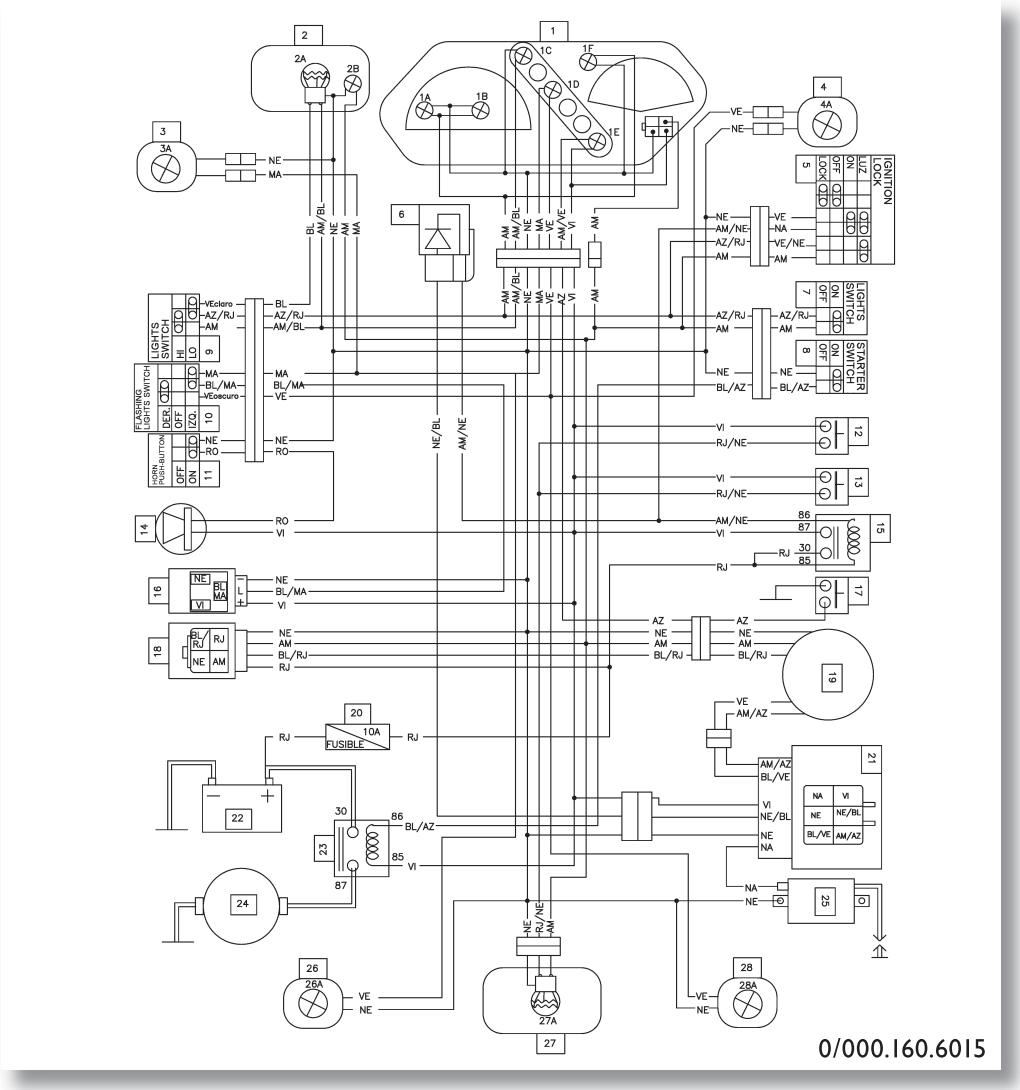

NOMENCLATURE OF THE COMPONENTS			
1	INSTRUMENT PANEL 1A LIGHTING LAMP C/km 12V 1,2W 1B RESERVE TANK CONTROL LAMP 12V 1,2W 1C FLASHING LIGHTS CONTROL LAMP 12V1 1,2W 1D INTENSIVE CONTROL LAMP 12V1 1,2W 1E NEUTER CONTROL LAMP 12V1 1,2W 1F LAMP 12V 1,2W	13	REAR BRAKE LIGHTS
2	HEAD LIGHT 2A MAIN LAMP 12V 55/60W 2B POSITION LAMP 12V 5W	14	HORN DC 12V
3	HEAD LEFT FLASHING LIGHT 3A FLASHING LAMP 12V 10W	15	IGNITION RELAY
4	HEAD RIGHT FLASHING LIGHT 4A FLASHING LAMP 12V 10W	16	CENTRAL FLASHING LIGHT 12V 2X10W
5	IGNITION LOCK	17	NEUTER SWITCH
6	DIODE OF ENGINE STOPPAGE	18	VOLTAGE REGULATOR AC-DC 12V
7	LIGHTS SWITCH	19	MAGNETIC FLYWHEEL
8	STARTER PUSH-BUTTON	20	FUSE 10 A
9	INTENSIVE AND DIPPED HEADLIGHTS SWITCH	21	CDI CENTRAL IGNITION
10	FLASHING LIGHT SWITCH	22	BATTERY 12 V
11	HORN PUSH-BUTTON	23	ELECTRIC IGNITION RELAY 12V 70A
12	FRONTAL BRAKE LIGHTS	24	STARTER
		25	H.T. COIL
		26	REAR RIGHT FLASHING LIGHT 26A FLASHING LAMP 12V 10W
		27	TAIL LIGHT WITH LEDS
		28	REAR LEFT FLASHING LIGHT 28A FLASHING LAMP 12V 10W

COLOURS CODE			
YE	YELLOW	R	RED
B	BLACK	GR	GREEN
BR	BROWN	P	PINK
W	WHITE	VI	VIOLET
BL	BLUE	OR	ORANGE